

Christmas Bon-bon

Requirements

Baby Lock Overlocker Machine

Machine Needles to suit your Baby Lock Model

Flat Sole Foot

Top Stitch Needle size 14

Quilting Clips

Christmas Print Fabric: 19" x 6"

Note: check that the 6" will fit around your cardboard tube with a 6.5mm seam allowance

Charles Parson Fusible Parlan: 6" x 5 1/2"

1" Organza Ribbon: 2 pieces x 20cm each

5mm Ribbon, Braids, Ric Rack or Cords for decorating the Ladder Stitch

Empty Cardboard Tubes from Cling Wrap, Baking Paper or Foil (cut into 4" lengths)

DESIGNER THREADS BY BABY LOCK

4 x Maxi Lock Overlocker Thread Light Grey (32432)

1 x Pearl Red (PL241)

1 x Pearl Silver (PL432)

1 x Moonlight Silver (ML114)

1 x Moonlight Red (ML105)

Preparation:



Fold the 19" length of fabric in half and draw a line down the centre, then mark two more lines each side of the centre 1" apart.

Turn each end 4" to the back with wrong side together and press.

Decorating ~ Ladder Stitch:

Set machine up for 2 Thread Ladder Stitch, insert the top stitch needle in the Left or O1 needle (this will allow for the thicker thread in the eye of the needle) using the Pearl (Silver) in the needle and Maxi Lock in the lower looper. (Check Quick Reference Threading Guide for Threading and engage subsidiary looper)

- Stitch Selector: A
- Stitch length: 3-4
- Stitch Width: 7.5
- Needle: Left or O1
- Differential Feed: N

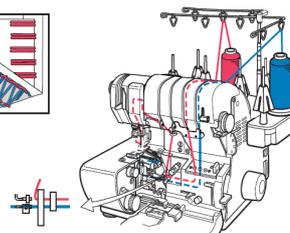


Attach the Flat Sole Foot

Fold the centre line mark with right sides together and create the first row of Ladder Stitch.

Change the needle thread to Pearl (Red), now create another two rows of Ladder Stitch using the markings fold right sides together and stitch each side of the first row of Ladder Stitch.

NOTE: do not cut the fabric edge with the blade, use the left or O1 needle mark on the front of the presser foot.

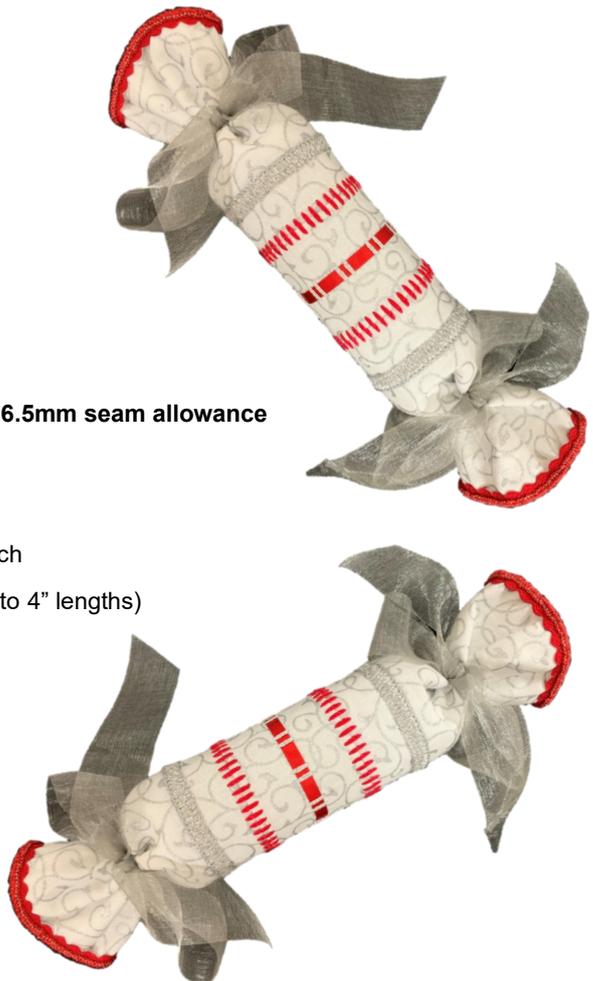




Decorating ~ Flat Lock:

Set machine up for 3 Thread Flat Lock, lift the presser foot and re-move the needle thread but leave the lower looper threaded, (note: change the needle and its position). Use the Moonlight (Silver) in the upper looper and Maxi Lock in the needle and lower looper. **Note: the needle thread needs to be place in the upper looper tension.**

Stitch Selector: D
Stitch Length: 2.0
Stitch Width: 5.0
Needle: Right or O2
Differential Feed: N

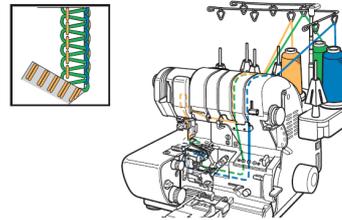

Fold on the marked lines each side of the completed three rows of Ladder Stitch with wrong sides together, stitch down each side to create the Flat Lock Stitch.

NOTE: do not cut the fabric edge with the blade, use the right or O2 needle mark on the front of the presser foot.

Pull the Ladder Stitch and Flat Lock Stitches out so it sits flat.

Decorating ~ Three Thread Rolled Hem:

Set machine up for 3 Thread Rolled Hem using the Maxi Lock in the needle and lower looper, Moonlight (Red) in the upper looper.

Stitch Selector: D
Stitch length: 2.0 R
Stitch Width: M
Needle: Right or O2
Differential Feed: N



Turn the 4" pressed ends to the back wrong sides together, stitch a Rolled Hem attaching the ric-rack at the same time across each end.

Note: use the right or O2 needle mark on the front of the presser foot.


Weave 5mm ribbon into the centre row of Ladder Stitch.

Iron the Parlan to the wrong side in the centre, this will protect the stitching and make inserting the cardboard tube easier.

Put right sides together and use quilting clips to hold.

Set machine up for 4 Thread Overlock with Maxi Lock Thread.

Stitch Selector: A
Stitch length: 2.5
Stitch width: 6.0
Needles: Left & Right or O1 & O2
Differential Feed: N

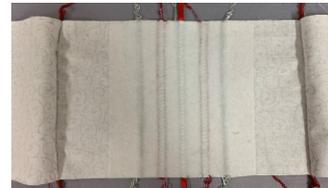

Overlock the seam together.

Thread the overlocking thread ends into the inside stitching, turn and press.

Insert the cardboard tube and tie the organza ribbon around each end, then decorate the tree or table.

Merry Christmas & Happy New Year from the Baby Lock Team

