

Techniques

Knit Binder

baby lock

Suitable for BLCS and Ovation with additional 4 hole flat bed table

8mm Knit Binder D13-04-08E cut fabric strip 30 - 32mm wide


10mm Knit Binder D13-04-10E cut fabric strip 36—38mm wide

15mm Knit Binder D13-04-15E cut fabric strip 48 -50mm wide

* width will vary depending on type of fabric used

Using your instruction manual or quick reference threading guide set your machine up for a narrow left coverstitch with a stitch length of approx 3.

Feed your knit binding through your binder with the wrong side facing you see pic 1. Screw driver or tweezers are a handy tool for this step.

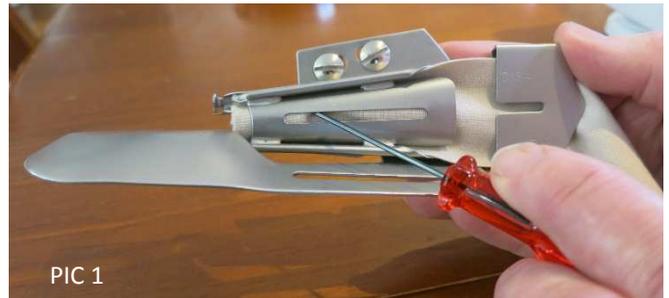

PIC 1



PIC 2

Using your tweezers pull your fabric through the end of the binder at a 90 degree angle see pic 2.

Position your binding under the foot. Place the binder on the flatbed of the machine over the two front holes and secure using the white screws provided with your machine. See pic 3. Stitch approximately 5cm to check your placement and adjust if needed.



PIC 3



PIC 4

Feed the fabric you wish to bind into the centre of the binding and continue to stitch. See pic 4.



baby lock

www.babylock.com.au

ph: 03 9339 7777